JCCH-JCCQ
JCCH-JCCQ DELUXE

Self Priming Jet Pumps

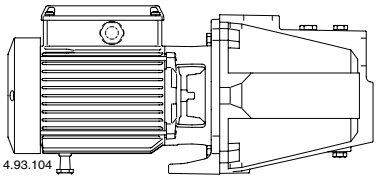

JCCH 15 / JCCH 15 DELUXE
JCCQ 15 / JCCQ 15 DELUXE
JCCH 20

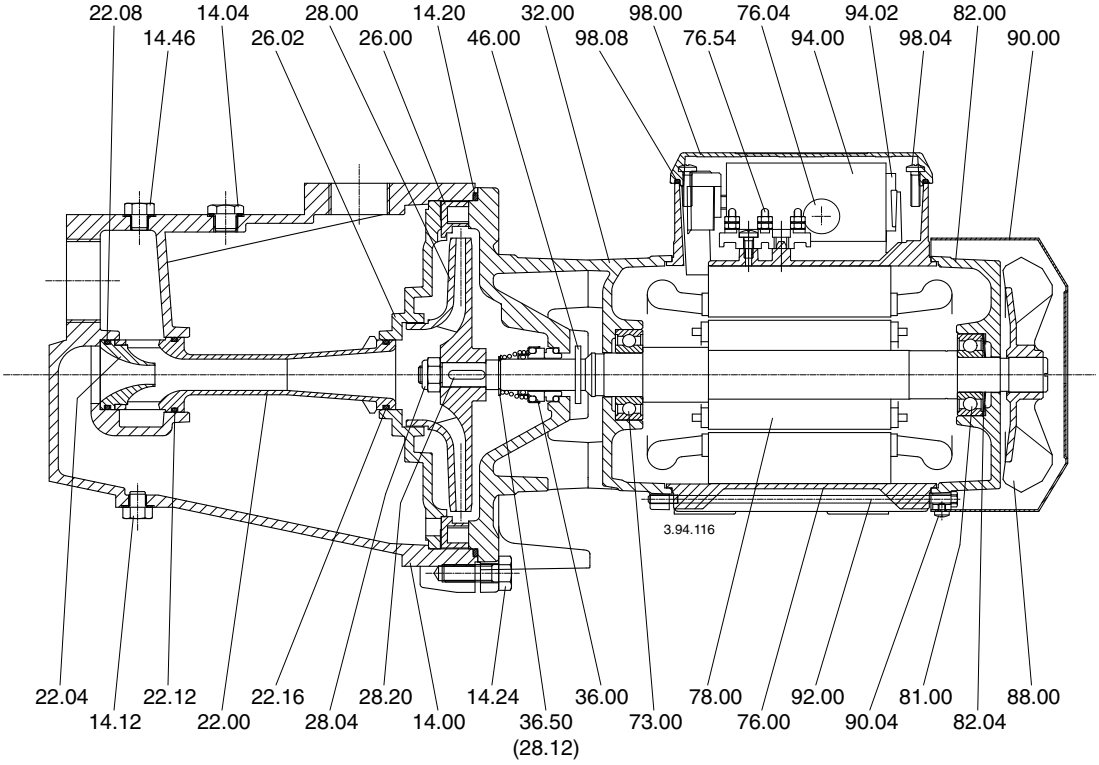

Parts Designation

10,00 Ejector casing
10,04 Plug with washer
10,05 Washer
10,12 Gasket
10,16 Gasket
10,20 Screw
12,00 Casing cover
12,01 Delivery casing
12,02 Bush casing
12,03 Bearing sleeve (stationary part)
12,04 Valve guide
12,05 Circlip
12,06 Valve seat
12,07 Valve joint washer
12,10 Valve set
12,12 Valve joint
12,16 Plug
12,20 Screw
12,21 Nut
12,24 Casing cover motor side
12,30 Stage bearing sleeve
12,31 Bearing sleeve (rotating part)
13,00 Counterflange, suction side
13,01 Flange gasket, suction side
13,04 Screw
13,08 Nut
13,12 Counterflange, delivery side
13,13 Flange gasket, delivery side
13,16 Screw
13,18 Washer
13,20 Nut
13,24 Washer
13,30 Inlet adaptor
13,31 Gasket
13,34 Screw
13,38 Nut
13,30 Outlet adaptor
13,31 Gasket
13,34 Screw
13,38 Nut
13,50 complete union
13,54 Union nut
13,58 Gasket
13,60 Flange with adapter
14,00 Pump casing
14,02 External jacket
14,03 External jacket with suction lantern
14,04 Plug with washer
14,05 Washer
14,06 O-ring for plug
14,12 Plug with washer
14,13 Washer
14,14 Plug
14,15 O-ring for plug
14,16 O-ring for plug
14,17 Screw
14,18 O-ring
14,19 O-ring
14,20 Casing gasket
14,22 Fastening ring
14,24 Screw or stud
14,28 Nut
14,29 Washer
14,32 Fitting for pipe with washer
14,34 Washer
14,42 Plug with washer
14,43 Washer
14,46 Plug with washer
14,47 O-ring
14,50 Plug
14,54 Wear ring
14,55 Adapter ring
14,56 Grub screw
14,60 Flange, suction side
14,62 Screw
14,64 Valve, set
14,65 Gasket
14,66 Washer
14,67 Washer
14,68 Screw
14,69 Nut
14,70 Inspection cover
14,72 Screw
14,73 Nut
14,74 Washer
14,75 Gasket
14,80 Vent valve and ball
14,82 Vent valve ball
15,00 Strainer cover
15,04 O-ring for strainer cover
15,08 Stud
15,12 Hand knob
15,16 Square nut
15,50 Strainer
15,60 Spacer screw
15,70 Screw
16,00 Suction casing
16,04 Plug with washer
16,05 Washer
16,12 Air release plug with washer
16,13 Washer
16,14 Plunger valve
16,15 spring
16,16 O-ring
16,17 Valve
16,20 Casing gasket
16,30 Elbow
18,00 Interstage plate
20,00 Delivery casing
20,04 Plug with washer
20,05 Washer
20,12 Screw
20,16 Nut
20,20 Washer
22,00 Ejector
22,02 Diffuser - ejector
22,04 Nozzle
22,08 O-ring for high pressure chest
22,12 O-ring suction side
22,16 O-ring impeller side
25,01 First stage casing
25,02 Stage casing
25,03 Stage casing with bearing
25,04 Gasket
25,05 Last stage casing
25,06 Screw
25,10 Spacer Washer for missing impeller
25,11 First stage spacer
25,20 Preload ring stages
25,22 O-ring
25,23 spacer
25,24 Support ring preload
25,26 Washer
25,28 Screw
25,30 Circlip
25,32 Locking snap ring
25,34 Screw
26,00 Diffuser (pump)
26,01 Final diffuser
26,02 Diffuser plate
26,04 Screw
26,06 O-ring
26,08 Diffuser sleeve
26,10 Suction ring
27,00 Cover-diffuser
27,04 Diffuser-funnel
27,08 O-ring for diffuser-funnel
28,00 Impeller
28,02 Counter thrust bearing ring
28,04 Impeller nut (or screw)
28,05 Circlip
28,07 Washer
28,08 Washer
28,12 Circlip
28,20 Impeller key
28,24 Locking sleeve
28,50 Drive gear
28,51 Drive shaft
30,00 Delivery side impeller
30,50 Driven gear
30,51 Driven shaft
32,00 Lantern bracket
32,02 Suction lantern
32,04 Screw
32,05 Nut
32,08 elbow
32,12 Foot support
32,16 Screw
32,20 Screw
32,21 Screw
32,30 Guard
32,31 Washer
32,32 Screw
32,33 Nut
32,40 Air release plug with washer
32,41 Washer
34,00 Casing cover
34,01 Lower cover
34,02 Upper cover
34,03 Oil chamber cover
34,04 Sealing ring impeller/cover
34,05 Nut
34,06 Grub screw
34,08 Plug
34,09 O-ring
34,12 Stud
34,13 O-ring
34,16 Nut
36,00 Mechanical seal
36,50 Mechanical seal circlip
36,51 Retaining ring, split
36,52 Shoulder ring
36,54 Spacer sleeve
38,00 Packing
40,00 Radial shaft seal
40,04 Spacer ring
40,08 Shoulder ring
40,12 Circlip
42,00 Cover plate for seal
42,04 O-ring for cover plate
43,00 Packing Gland Bush
43,01 O-ring
44,00 Stuffing box gland
44,04 Lantern ring
46,00 Deflector
46,50 Sand guard
46,51 Sand guard ring
50,00 Lower bearing housing
52,00 Bearing bush
52,04 Grub screw
54,00 Support column
54,04 Grub screw
54,08 Grub screw
56,00 Adapter
60,00 Bearing housing
60,02 Foot support
60,04 Screw with washers
60,05 Washer
60,06 Washer
60,08 Nut
60,10 oiler
60,11 Oil
60,14 Plug
60,15 Washer
60,18 Plug
60,19 Washer
61,00 Base
61,02 Tie-bolt
61,03 Washer
61,04 Nut
61,07 Screw
61,30 Support foot
61,32 Screw
61,34 Washer
61,36 Nut
62,00 Bearing cover, impeller side
62,04 Gasket
62,08 Screw
62,12 Lubricating nipple
63,00 Ball bearing, impeller side
63,04 Circlip
63,22 Radial Oil Seal
64,00 Pump shaft
64,08 Shaft sleeve
64,10 Bearing sleeve
64,12 O-ring for shaft sleeve
64,13 Upper spacer sleeve
64,14 Lower spacer sleeve
64,15 Intermediate spacer sleeve
64,16 Key for shaft sleeve
64,18 Spacer sleeve
64,19 Spacer sleeve
64,20 Key for shaft end
64,21 Coupling
64,22 Coupling, set
64,23 Washer
64,24 Shear pin
64,25 Screw
64,26 Adjustment Ring
64,50 Cover plate
66,00 Ball bearing, coupling side
66,04 Shoulder ring
66,08 Circlip
66,12 Shoulder ring
66,16 Circlip
66,18 Circlip
66,19 Shoulder ring
66,22 Radial Oil Seal
68,00 Bearing cover, coupling side
68,04 Gasket
68,08 Screw
68,12 Grease cup
68,16 Compensation spring
70,00 Motor cover, pump side (l. bracket)
70,04 O-ring
70,05 O-ring
70,08 O-ring
70,09 O-ring
70,10 O-ring
70,11 Cable gland ring (float switch)
70,12 Cable gland ring
70,13 Washer
70,14 Cable fastener
70,15 Screw
70,16 Cable gland
70,17 Lock ring
70,18 Screw
70,19 Nut
70,20 Screw
70,21 Washer
70,22 Nut
70,23 O-ring
70,24 Bearing cover, pump side
70,26 Screw
70,27 Gasket
70,28 Grease cup
72,00 Mechanical seal
72,02 Circlip
73,00 Pump side bearing
73,02 ring
73,04 Circlip
73,08 V-ring, pump side
73,12 Circlip
74,04 Circlip
76,00 Motor casing with winding
76,01 Motor jacket with winding
76,02 Kit, motor jacket
76,04 Cable gland
76,05 Conduit
76,06 Nut
76,08 Plug
76,09 Nut
76,11 Thermal protector block
76,12 Thermal protector
76,13 flange
76,14 Circlip
76,15 Thermal protector cover
76,16 Support
76,20 Pin
76,30 Base support for MPC
76,31 Screw
76,32 Nut
76,50 Rewinding
76,54 Terminal board, set
76,55 Screw
76,60 Float switch
76,62 Jacket cover
76,63 Screw
76,64 Handle
76,65 Handle clamp
76,66 Washer
76,68 O-ring
78,00 Shaft with rotor packet
78,08 Motor jacket
78,10 Motor jacket
78,12 O-ring
81,00 Ball bearing
81,04 V-ring, fan side
81,08 Circlip
81,12 Compensating ring
82,00 Motor end shield, fan side
82,01 Motor end-shield, non-drive end
82,02 Screw
82,03 O-ring
82,04 Compensating spring
82,05 Screw
82,06 Washer
82,08 Screw
82,09 Nut
82,10 Eyebolt
82,11 Screw
82,12 O-ring
82,14 O-ring
82,18 Bearing cover, fan side
82,20 Screw
82,22 Grease cup
82,24 Circlip
84,00 Rotor diaphgragm cover
84,04 Rotor diaphgragm
84,08 Screw
86,00 Stator membrane cover
86,04 Membrane
86,05 Diapham protection plate
86,12 Fastening Ring
88,00 Motor fan
88,04 Circlip
88,08 Screw
90,00 Fan cover
90,04 Screw
90,05 Washer
90,08 Support screw
92,00 Tie-bolt
94,00 Capacitor
94,02 Capacitor gland
94,04 Capacitor collar
94,08 Capacitor collar
94,12 Screw
96,00 Cable
96,02 Cable with plug
96,04 Cable guard
96,05 Cable jacket
96,07 Cable fastener
96,08 Clamp
96,09 Screw
96,10 Nut
96,12 Block for power cable
96,13 Block for floating switch cable
98,00 Terminal box cover
98,04 Screw
98,05 Washer
98,08 Gasket
98,12 Terminal box
98,16 Screw
98,20 Screw
98,24 Gasket
98,28 Gasket
98,50 lamp
95,54 switch
99,00 Complete motor
99,05 eyebolt
99,06 Washer
99,07 Washer